


# SYBONY

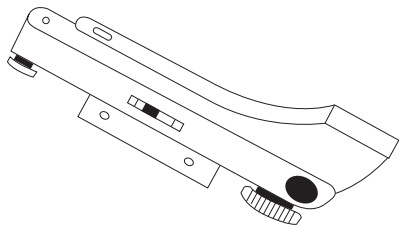

## SV184

### RED DOT SIGHT INSTRUCTIONS

CAUTION: BE SURE THAT THE CROSSBOWS IS NOT LOADED. PRACTICE SAFE HANDLING PROCEDURES AT ALL TIMES.

#### MOUNTING YOUR RED DOT SIGHT:

The red dot sight is designed for mounting on a standard 3/8" dovetail base. As there is no set eye relief for red dot, allow a minimum of three inches of space between the eyeball and shooter's eye when in the shooting position.

Loosen locking nuts "D", and mounting brackets "C", place it on the dovetail base of the crossbows, tighten up bolts and locking nuts.

NOTE: FOR ADDITIONAL SECURITY. ADD A DROP OF THREAD-LOCKING COMPOUND TO THE CENTER OF EACH LOCKING NUT.

#### INSTALLING BATTERY:


Red dot sights are powered by one 3V coin style lithium battery, type 2032. To install battery, pop open the battery cover cap "F" slide out the battery and insert new battery, positive (+) side up, replace battery cover cap.

NOTE: DO NOT TURN THE BATTERY COVER CAP, IT IS NOT AN ADJUSTMENT KNOB.

#### ZEROING:

With the scope mounted, rest the crossbow on a solid support: turn on switch "E", sight along the barrel and aim at a target 10 yards away. Sight through your red dot sight and use the windage adjustment "G" and elevation adjustment "A" to align the lighted reticle with the target as seen along the barrel.

- (A). ELEVATION ADJUSTMENT
- (B). RED DOT SIGHT
- (C). MOUNTING BRACKETS
- (D). LOCKING NUTS
- (E). ON/OFF SWITCH
- (F). BATTERY COVER CAP
- (G). WINDAGE ADJUSTMENT
- (H). SIGHT GLASS

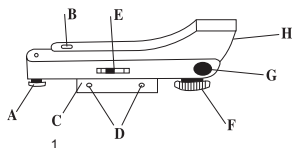



- Do not view the sun or other intense light with your products or even with the naked eye; Otherwise there may be permanent eye damage.
- Kids need to be used under the guardianship of adults to avoid the unnecessary damage.
- Do not put the plastic package a place your kids can reach. If not, the kids may put the plastic into the mouth and suffer from suffocating.

#### Care and Clean:

The item do not need routine maintenance other than making sure that the objective lenses and eyepieces are kept clean. Dirty objectives and/or eyepieces mean less light transmission and loss of brightness as well as unsharp images. Keep your optics clean! When not using your item, store those in the case provided.

#### Usage Notice:

1. Store the product in a ventilated, dry, clean place or put it in a dry box.
2. If there are dust and other dirt on the optical lens, use a professional cleaning kit to clean it. Do not wipe it directly with a cloth and a hard brush.
3. Please do not disassemble or repair the product yourself. If you need to repair it, please contact our professional after-sales department.
4. Do not use non-waterproof products in wet environments, use waterproof products in wet environments, and dry them after use.
5. When viewing indoors, please do not close the window and watch it through the window, which will reduce the product observation effect.

#### Avoid Choking Hazard



Small Parts. Not for children under 3 years.

#### Approved Accessories



- This item meets the regulatory standards when used with the Svbonny accessories supplied or designated for the product.
- For a list of Svbonny-approved accessories for your item, visit the following website: <http://www.Svbonny.com>

#### Warranty Card

Product Model	
Purchasing Date	
Defect Reason	
Dealer Name	
Telephone	
User's Name	
User's Address	
User's Email	

#### Remarks:

1. This guarantee card should be kept by the user, no replacement if lost.
2. Most new products carry a one-year manufacturer's warranty from the date of purchase.
3. The user can get warranty and after-sales service as below:
  - Contact the seller where you buy.
4. For warranty service, you will need to provide a receipt proof of purchase from the actual seller for verification.

#### Exclusions from Warranty Coverage:

1. To any product damaged by accident.
2. In the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs.
3. If the serial number has been altered, defaced, or removed.

EU Importer:

Name: Germany Retevis Technology GmbH  
Address: Uetzenacker 29,38176 wendeburg

# 说明书要求

尺寸：160\*100mm

印刷：正反黑白印刷

装订：折页

纸张材质：双胶纸

本页无需印刷